

R//PLATFORMS

Randall Platforms – Elevated Platform Preventative Maintenance and Usage Guidelines

This preventative maintenance guideline is to inform users that regular inspection of your platform and enclosure must be completed both daily before use and extensively every three months. Using a damaged or malfunctioning platform could result in bodily injury. Use only Randall replacement parts and hardware for repairs.

Inspect all screws bolting all enclosure panels. Deploy and stow platform to feel if movement is right.

In the deployed position:

- Check the latches handles (1) and check for latches (2) proper functionality, lubricate them with *Dry Lube PTFE Formula Spray*. Inspect all cables.
- See through the structure if the (3) slide rollers and block fasteners are tight.
- Check the lift assist springs (4) for signs or wear or breakage.
- Estimate the sides wear plates (5) if it is time for replacement.
- Check all vertical (6) linkages bolts and bolts of the side stabilizers.
- Inspect deck walking surface for unusual wear and stress markings. Stressing and or excessive wear can be an indication of fatigue. Any components showing these signs should be replaced immediately.

